

Application Note

TOUCH THROUGH-GLASS FIRMWARE INSTRUCTIONS

Applicable to:

- TF3222MC-B2
- TF3238MSC-B2AG
- TF4338MSC-B2AG
- TF4938UHSC-B2AG
- TF5538UHSC-B2/W2
- TF6538UHSC-B1
- TF6538UHSC-B2



TOUCH THROUGH-GLASS FIRMWARE INSTRUCTIONS

- Connect the screen to a PC with Windows using the USB cable
- Unzip the file TFxx38_B2AG&3222_THROUGH-GLASS_Firmware_2019_20_23.zip
- Go to the folder UpdateFwSelector_95xx_TF65LCMEC_TF3222-20191022
- Double-click on **BinfileSelector.exe**

FwBinFiles	📁	15/11/2019 12:04	File folder	
iconengines	📁	15/11/2019 12:04	File folder	
imageformats	📁	15/11/2019 12:04	File folder	
nUpdateFW	📁	15/11/2019 12:04	File folder	
platforms	📁	15/11/2019 12:04	File folder	
res	📁	15/11/2019 12:04	File folder	
sqldrivers	📁	15/11/2019 12:04	File folder	
translations	📁	15/11/2019 12:04	File folder	
BinfileSelector	📄	27/06/2018 19:23	Application	51 KB
D3Dcompiler_43.dll	📄	26/05/2010 20:41	Application exten...	2.057 KB
DynamicSiSLog.dll	📄	21/11/2017 15:09	Application exten...	22 KB
libEGL.dll	📄	29/06/2015 20:22	Application exten...	11 KB
libGLESV2.dll	📄	29/06/2015 20:21	Application exten...	1.674 KB
Qt5Core.dll	📄	08/06/2017 13:34	Application exten...	4.540 KB
Qt5Gui.dll	📄	29/06/2015 20:24	Application exten...	4.760 KB
Qt5Sql.dll	📄	29/06/2015 20:22	Application exten...	148 KB
Qt5Svg.dll	📄	29/06/2015 20:32	Application exten...	245 KB
Qt5Widgets.dll	📄	29/06/2015 20:27	Application exten...	4.384 KB



TOUCH THROUGH-GLASS FIRMWARE INSTRUCTIONS

- In the **MainWindow**:

1) select the adequate model e.g. **TF4338MSC_B2**

2) Select the mode you wish to use:

- **Glove mode** for cover glass up to **2mm** thick
- **Through-Glass** for cover glass up to **6mm** thick

3) Click **UpdateFW**

- If you wish to go back to factory settings:

- Select Normal
- Click **UpdateFW**

